



# BLUETOOTH TIMER

Android user guide  
English




The Calix Timer communicates via a Bluetooth connection.  
Bluetooth must be enabled on your phone when using the app.

For more information, please visit [www.calix.se](http://www.calix.se)




# ON/OFF

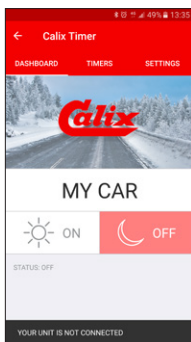

1.


Manual On/Off settings.

Timers will only be available nearby the car.

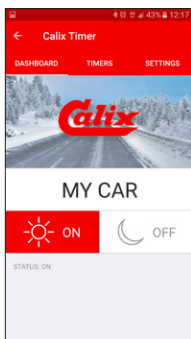

2.

Overview: Manual On.

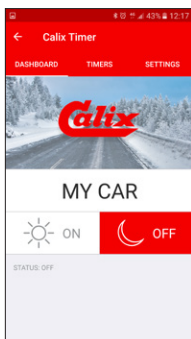

3.


Overview: Manual Off.

## SETTINGS

The Economy comfort setting offers a shorter heating time, still long enough for most cars. This setting is suitable for small cars.


Standard is intended for mid-size cars.

The Plus setting means a slightly longer pre-heating time. Suited for larger cars and/or in cold climates.

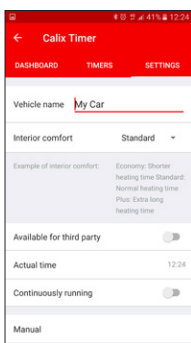


1.

Settings.

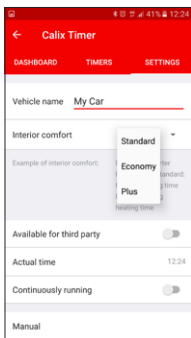

2.


Set comfort level.

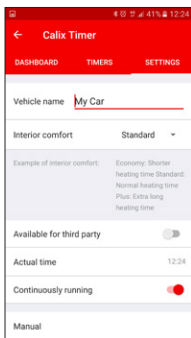


3.

The, "Always on" setting will override your saved timers.


# GETTING STARTED

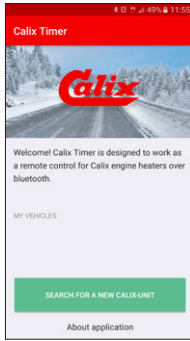


1. Matching your new unit.  
Click to start searching.

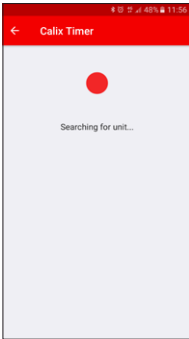


2. The app starts searching for your unit.

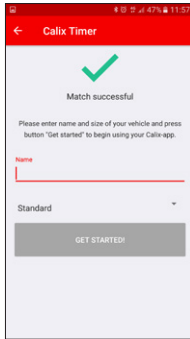


3. Unit is found.  
Note: Your phone must have Bluetooth enabled.

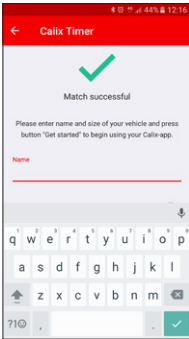

4. Enter a name for your car.

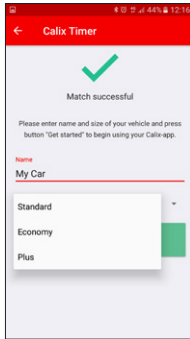


5. Choose interior comfort level.

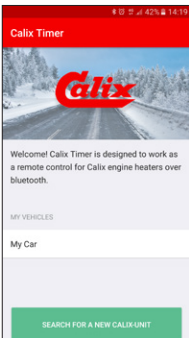


6. You are now ready to start using your Calix Timer.

# AUTOSTART MODE


– The Calix Timer automatically calculates when to start pre-heating, based on the current outdoor temperature.

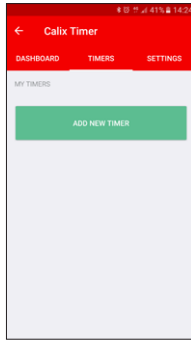


1. Set Timer, Autostart mode.

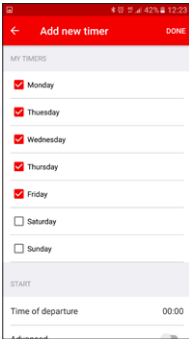


2. Choose the day(s) you want to activate.

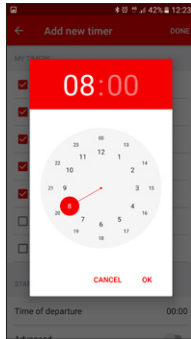

3. Set the time you want your heater to start.

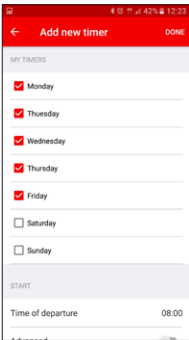


4. Save your settings.

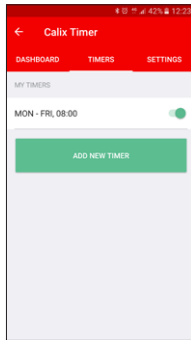


5. Your Calix Timer is activated.

**N.B:** If you arrive after the preset departure time, the intelligent plus function will keep your car heated.


# ADVANCED MODE

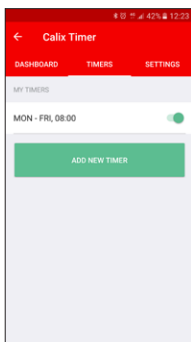


1. Set Timer, Advanced mode.

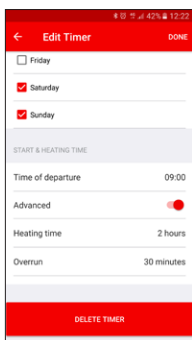


2. Choose the day(s) you wish to activate.

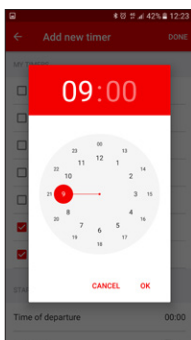


3. Set time of departure.

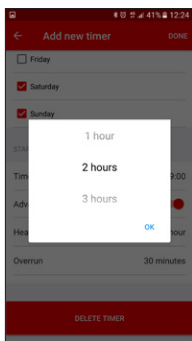

4. Set heating time. This sets how long the heater will run before departure time.

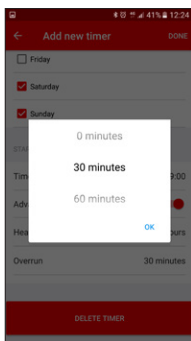

5. Set time for over-run. This sets how long the heater will run after the time of departure.

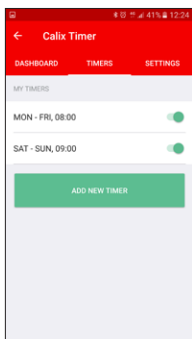

6. Your Calix Timer is now activated.



With a Calix system, winter doesn't have to be a pain. Our electric engine heater gives you an engine already heated and ready to go.

This isn't only good for your car, but also for the environment. A preheated engine produces less exhaust fumes.

With a Calix cabin heater, fingers blue with cold from clearing the windscreen are a thing of the past. All windows are always ice and snow free.

Calix brings warmth to both you and your vehicle – so that you are able to enjoy winter to the fullest.

**Calix AB**  
PO-Box 5026  
SE-630 05 Eskilstuna  
Sweden

**Phone:**  
+46 (0)16-10 80 00

**Support:**  
+46 (0)16-10 80 90

**Fax:**  
+46 (0)16-13 22 45

**E-mail:**  
info@calix.se

**E-mail:**  
teknik@calix.se

**Internet:**  
www.calix.se

